



Configuring the SNMP Service

6350-SR

Configuring the SNMP Service

Goal

Difficulty: Easy

Minimum firmware: 18.1.29

Enabling and configuring an Accelerated device's Simple Network Management Protocol (SNMP) service to be an agent.

Setup

This article assumes you have an SNMP environment set up, complete with all the default MIBs and an SNMP manager. It will not visit all the details required to set up an SNMP environment. For more information, visit <https://www.digialocean.com/community/tutorials/how-to-install-and-configure-an-snmp-daemon-and-client-on-ubuntu-14-04>.

Sample

The Accelerated device is an SNMP, read-only agent.



Sample Configuration

Open the configuration page and set the following configurations.

1. In *Services* -> *SNMP*, select *Enable* to start the service.

- Specify a username and password for the connection to this agent in the *Username* and *Password* field respectively.
- Ensure the *Authentication type*, *Privacy passphrase*, and *Privacy protocol* are as required. This example will use the default configurations.
- Press **Save** at the bottom of the configuration page to save changes.

SNMP	
Enable	<input checked="" type="checkbox"/>
Port	161
Access control list	
Username	user
Password	passwd <input checked="" type="checkbox"/> Show
Authentication type	MD5
Privacy passphrase	<input type="text"/> <input type="checkbox"/> Show
Privacy protocol	DES

Once the configuration has been set, the device agent can be connected to. Since the agent is **read-only**, command changes to the device are not possible.

More up to date SNMP managers are able to take advantage of custom MIBs. Accelerated provides a default set of MIBs for download on the *System* page of the device's web UI. Use the link listed under the *SNMP MIB file download* section of the page to download the MIBs. It includes not only the default MIBs, but also an Accelerated-specific MIB (*ACCELERATED-MIB.txt*).

SNMP MIB file download
mibs.zip - Click to download a zip file of all the MIBs supported by the device

Test SNMP Access

Once the SNMP service is enabled and configured on the Accelerated device, you can use `snmpget` to test out the connection and verify your settings. See example below. Note that if you configure the *Privacy passphrase* option in the device's configuration, you will need to provide that passphrase to the `-X` option of the `snmpget` command below.

```
snmpget -l authPriv -u user -A passwd -X passwd -x DES -a MD5 192.168.2.1 SNMPv2-MIB::sysName.0
```

The above example will return the system name of the Accelerated device.

```
SNMPv2-MIB::sysName.0 = STRING: 6330-MX
```

A sample query of the Accelerated-specific MIB:

```
# Get the modem model
$ snmpget -l authPriv -u user -A passwd -X passwd -x DES -a MD5 192.168.2.1 1.3.6.1.4.1.40083.1.1.14.0
```

```
SNMPv2-SMI::enterprises.40083.1.1.14.0 = STRING: "MC7455"  
$ snmpget -l authPriv -u user -A passwd -X passwd -x DES -a MD5 192.168.2.1 SNMPv2-  
SMI::enterprises.40083.1.1.14.0  
SNMPv2-SMI::enterprises.40083.1.1.14.0 = STRING: "MC7455"
```

You can also use the `snmpwalk` tool to see the full list of available OIDs and their current values. Example:

```
snmpwalk -l authPriv -u user -A passwd -X passwd -x DES -a MD5 192.168.2.1
```