

Remote Access 6300-CX, 6310-DX, 6330-MX, and 6350-SR



Remote Access

Skill Level: Moderate (assumes familiarity with SSH sessions)

Goal

To SSH into an Accelerated device remotely, using the terminal available via Accelerated View and a publicly reachable IP address.

If your device does not have a publicly reachable IP address, you can still leverage the <u>Terminal on Unit via the</u> <u>Accelerated View IPSec Tunnel</u>.

Setup

Devices can be managed over SSH so long as the external zone is enabled for remote SSH and web UI access.

• The default credentials are:

Username: root

Password: default

NOTE: The configuration steps outlined below will open external access to your Accelerated device. It is imperative that the default password is changed to a more secure key to prevent intrusions.

Sample Configuration

Open the configuration profile of the device and expand *Services*. Under *Web Administration*, expand *Access Control List* and *Zones* to create a new entry for "External." Repeat this process for the *Zones* associated with the *Access Control List* under the *SSH* menu heading. The following steps reflect the sample setup indicated in the screenshot below:

- 1. Under Services -> Web Administration -> Access Control List, expand Zones.
- 2. Add a new entry for "External."
- 3. Under Services -> SSH -> Access Control List, expand Zones.
- 4. Add a new entry for "External."



| 🖯 Web ad | ministrati | on 👻 | | | | |
|----------|-----------------|----------------|------|------|-------------|------|
| Ena | Enable | | | | | |
| Port | Port | | | 443 | | |
| E A | ccess con | trol list 👻 | | | | |
| | IPv4 Addresses | | | | | |
| | ⊕ IPv6 | - | | | | |
| | 🕀 Inter | faces 👻 | | | | |
| | 🖯 Zones 🗸 | | | | | |
| | ^{1.} z | one | | | Intern | al r |
| | 2. z | one | | | - | / |
| | з. z | one | | / | Setup | , |
| | 4. z | one | | | • Extern | al |
| | Adi | l Zone: A | dd | | | |
| SSL | SSL certificate | | | | | |
| View | N | | * | Auto | | , |
| ⊞⊔ | egacy por | t redirecti | on + | | | |
| ⊖ SSH + | | | | | | |
| Ena | ble | | + P | | | |
| Port | t | | * | 22 | | |
| ⊟ A | ccess con | trol list 🗸 | | | | |
| | ⊕ IPv4 | Addresse | | | | |
| | ⊕ IPv6 | Addresse | - | | | |
| | 🕀 Inter | faces 👻 | | | | |
| | ⊟ Zone | s . | | | | / |
| | 1. z | one | | | Any | |
| | 2. z | one | | | Extern | al |
| | | | | | | - |
| | Ad | I Zone: A | dd | | | |

Once the configuration has been updated, click the *Terminal on Unit* hyperlink available from the *Device Details* screen.

| Cellular 6350-SR | | Reports 🔻 | Actions 🗸 | Commands - | SMS 🗸 | Pages 🔻 | | | | |
|-----------------------|--------------------------------|--|----------------------------|-----------------------|-------|---------|--|--|--|--|
| Device Details | | | | | | | | | | |
| Configuration | Organization: Accelerated Demo | | | | | | | | | |
| Settings | Site ID: Default | | | | | | | | | |
| | Configuration: | SR Default Demo - Last checked at Aug 21 2017 14:59:59 (EDT) | | | | | | | | |
| Associated Devices | MAC Address: | 0027042C9348 | | | | | | | | |
| Cellular Details | Serial: 6350010244041748 | | | | | | | | | |
| | Status: | Device is up | | | | | | | | |
| Tunnels | Model: | 6350-SR | | | | | | | | |
| Networks | Uplink IP Address: | 173.110.99.68 | | | | | | | | |
| Location | Terminal: | Terminal on Uni | t | | | | | | | |
| Contacts | Firmware Version: | 17.7.122 | | | | | | | | |
| Netflow | Primary Interface: | wwan1 | | | | | | | | |
| | Activated At: | Jun 07 2017 12:05:44 (EDT) | | | | | | | | |
| | Last Heartbeat: | Aug 22 2017 09:23:57 (EDT) | | | | | | | | |
| | Last Restart: | | Aug 21 2017 15:02:09 (EDT) | | | | | | | |
| | Data Plan: | N/A | | | | | | | | |
| | | | | | | | | | | |