


1 Verify kit contents

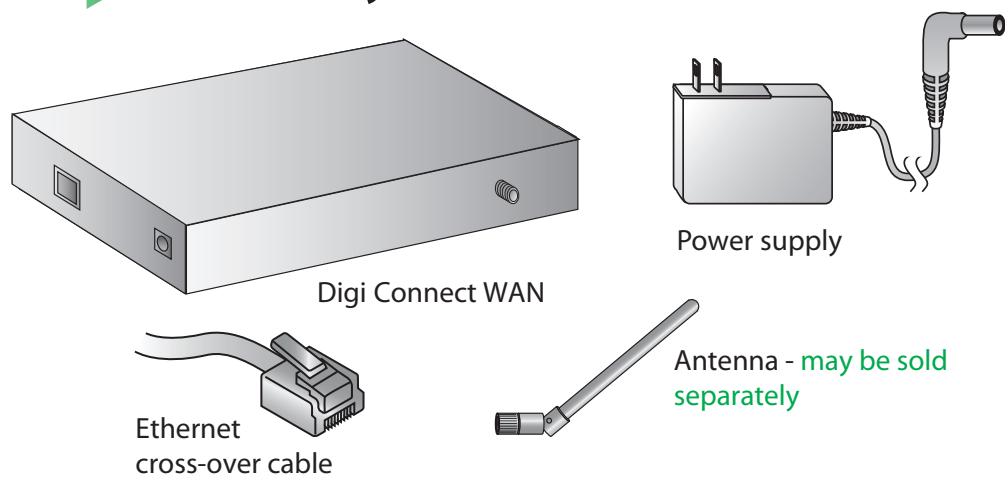

Quick Start Guide

Digi Connect WAN™ 1XRTT
Digi Connect WAN™ VPN 1XRTT
Digi Connect WAN™ IA 1XRTT

90000700_F


2 Connect hardware

a Connect Antenna

NOTE: Do not over-tighten antenna. Over-tightening may damage internal connections. Loosen antenna before adjusting antenna angles.

b Connect Ethernet cross-over cable to PC

c Connect Power supply

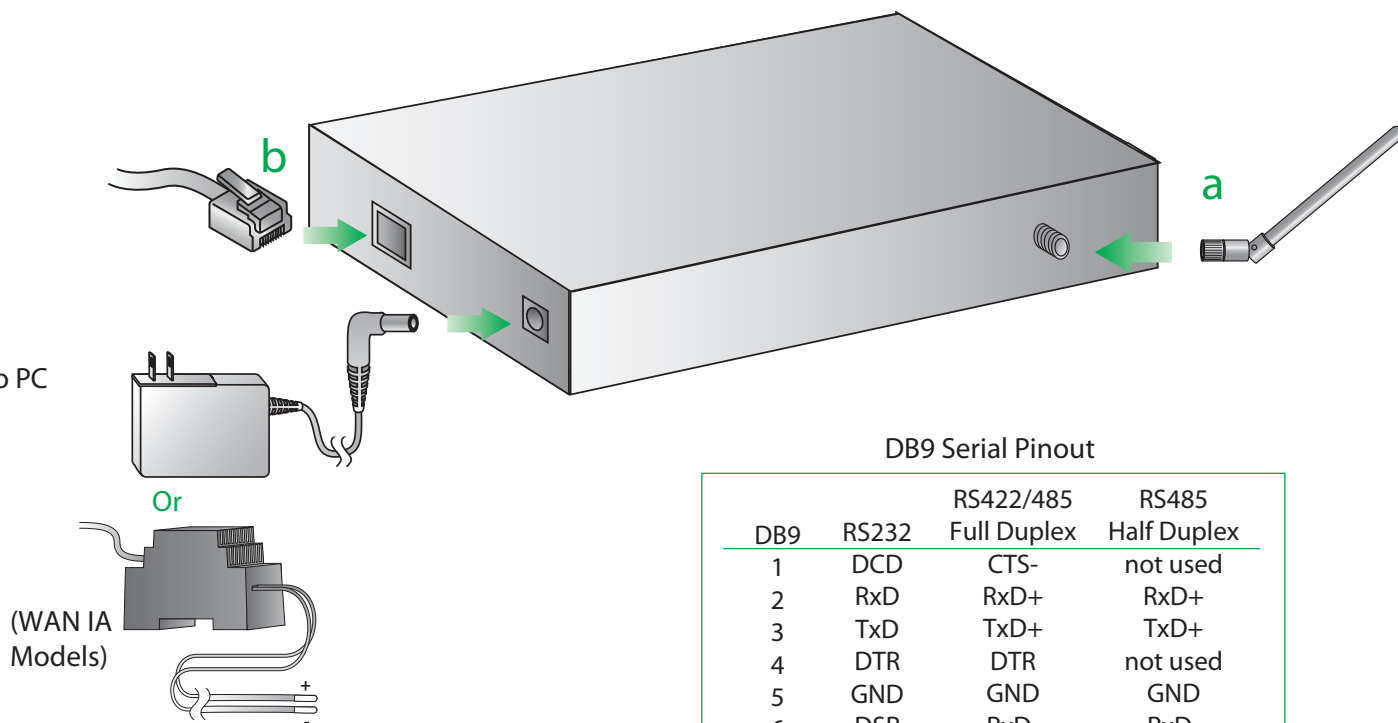

DB9 Serial Pinout

DB9	RS232	RS422/485 Full Duplex	RS485 Half Duplex
1	DCD	CTS-	not used
2	RxD	RxD+	RxD+
3	TxD	TxD+	TxD+
4	DTR	DTR	not used
5	GND	GND	GND
6	DSR	RxD-	RxD-
7	RTS	RTS+	not used
8	CTS	CTS+	not used
9	RI	TxD-	TxD-

NOTE: Set serial mode in software then on the web interface go to Configuration/Serial Ports

3 Configure your cellular settings

a Open your web browser and enter the IP address 192.168.1.1 in the URL address bar

b From the web interface, under Configuration, click "Mobile." Enter your service provider name and connection parameters and click "Apply." Select the link "Click Here" to automatically provision the device

NOTE: The Connect WAN has DHCP server enabled by default. In order to discover your Digi device, make sure your host computer is set up to obtain IP addresses automatically. Also ensure all firewall software is temporarily disabled

c Your device has been properly provisioned and is active if the PPP session shows (connected)

4 Verify

a Remove the Ethernet cable and plug it back into the PC to update the DNS

b Open a web browser and enter a web site of your choice in the URL address bar of your browser and hit "enter" (e.g. www.digi.com)

c For additional information about your cellular connection, go to Administration>System Information>Mobile and reference the user guide provided on the Digi support site (www.digi.com/support/)