



FREE

30 Day Trial of Digi Connectware® Manager

On-line Remote Management & Monitoring of Digi devices


Digi Connectware Manager provides a centralized platform to manage your Drop-in Network. A trial copy is provided on the Hardware and Software and Setup CD.

Using Digi Connectware Manager, you can

- **View** all Drop-in Network devices from anywhere using a web browser
 - Network-wide views for IP and ZigBee networks, showing address information, connection status and history, location, etc.
 - Detailed view for ZigBee nodes, showing configuration settings
- **Monitor** devices via Email or SNMP and trigger alarms based on disconnects, signal strength, data usage, etc
- **Create** custom device groups
- **Connect** to remote devices regardless of mobile IP addressing scheme
- **Map** mobile IP address to internet host name with Dynamic DNS integration
- **Troubleshoot** remote connections using detailed diagnostics/reports

Start your Trial Today in 3 EASY Steps!

1. Configure your Digi gateway device to point to the Digi Online Connectware Server.
2. Register to receive your username/password at <http://www.digi.com/cwmdemo/>. You will need your Digi device MAC ID address to see your device online.
3. Log into <http://connectware.digi.com>, click on **Device Management**, and locate your device from the list of public demo units.

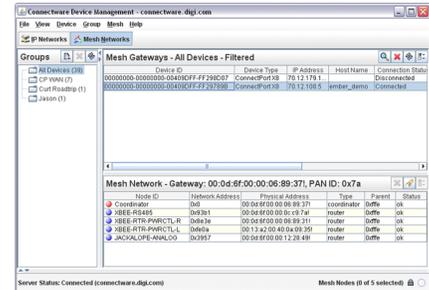

See reverse side of this page for detailed instructions

Need Help?

For technical assistance with your Drop-in Network, call 1-800-903-8430

Configure your Digi Device to use the Digi Connectware Manager Trial

Configure Digi devices for use with Digi Connectware Manager

1. Open a web browser.
2. In the browser's address bar, enter the IP address for your Digi device (usually 192.168.1.1).
3. On the navigation menu for your Digi device on the left side, click **Remote Management**.
4. On the **Remote Management Configuration** page:
 - a. Select the checkbox **Enable Remote Management and Configuration**.
 - b. In the **Server Hostname** setting, enter **connectware.digi.com**.
 - c. Select the checkbox **Automatically reconnect to the server after being disconnected**.
 - d. Set **Reconnect after** to 10 seconds.
5. If the Digi device connects to Connectware Manager properly, go to **Management > Connections**. The connection should be displayed there.
6. Optional Step:
 - a. To customize your Digi device's identity, choose **System** from the **Configuration** menu.
 - b. Fill in **Description**, **Contact**, and **Location**.Note: The device ID is also stored in this group of settings.

To locate your MAC address on your device

On the bottom of your Digi gateway device, find the label with **MAC ADDRESS** and a bar code underneath it.

To locate your Digi device in Digi Connectware Manager

- Once configured to connect to Digi Connectware Manager, the Digi device "phones home" and is displayed on the **Device List**.
- In the **Device ID** column, locate your Digi device by its MAC address. This address is embedded in the Device ID. The ID is preceded by **00000000-00000000-** and **FF-FF** is inserted in the middle of the MAC address.
- For example, if a device's MAC address is **00:40:9D:12:88:56**, it is displayed in the Device ID list as **00000000-00000000-00409DFF-FF128856**

Remote Management Configuration

For more information on configuring and using the Connectware Manager to remotely con

Connection Settings

Client-Initiated Management Connection

Enable Remote Management and Configuration using a client-initiated connection

Server Address:

Automatically reconnect to the server after being disconnected

Reconnect after: hrs mins secs



PN:(1P)90000905-88 B