



Connectware™

**RealPort
on
SCO OpenServer**

User Guide

© Digi International Inc. 2002, 2003. All Rights Reserved

The Digi logo, Connectware, PortServer, RealPort are trademarks or registered trademarks of Digi International Inc. All other brand and product names are the trademarks of their respective holders.

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org. OpenSSL License -----

=====
Copyright (c) 1998-2003 The OpenSSL Project. All rights reserved. * * Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment: "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

=====
This product includes cryptographic software written by Eric Young (ey@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License -----

Copyright (C) 1995-1998 Eric Young (ey@cryptsoft.com)

All rights reserved.

This package is an SSL implementation written by Eric Young (ey@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and

binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement: "This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"The word 'cryptographic' can be left out if the routines from the library being used are not cryptographic related :-).
4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement: "This product includes software written by Tim Hudson (tjh@cryptsoft.com)

"THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.] */

Chapter 1 Introduction	
Introduction to RealPort.....	7
Device Support.....	7
About This Guide.....	7
Purpose	7
Audience	7
Conventions: Special Fonts	7
Conventions: Square Brackets	7
Conventions: Italics.....	7
Conventions: Vertical Bar	8
Chapter 2 Planning and Requirements	
Requirements and Considerations	9
Information to Gather.....	9
Configuring a Digi One RealPort, Digi One IA RealPort, or PortServer for RealPort.....	9
Procedure	10
Setting Altpin	10
Configuring EtherLite for RealPort.....	10
Procedure	10
Assigning an IP Address.....	10
Using dgpserv to Assign an IP Address.....	10
Procedure	11
Related Documentation	11
PortServer Documentation	11
PortServer II Documentation	11
PortServer TS 8/16 Documentation.....	11
Digi One/PortServer TS 2/4 Documentation.....	11
Digi One IA RealPort Documentation	11
EtherLite Documentation	11
Chapter 3 RealPort Setup	
Master Setup Process	13
Installing the Driver: Downloaded.....	13
Procedure	13
Uninstalling RealPort	14
RealPort Devices	14
Device Name Format.....	14
Standard Device	15
Modem Device	15
Transparent Print Devices	15
Configuring a Device for a Terminal	15
Procedure	15
Configuring a Device for a Printer.....	16
Procedure	16

Configuring a Device for a Modem	16
Procedure: Configuring the UNIX Device	16
Procedure: Configuring Modems for Dial-in.....	17
Adding or Removing Digi Devices	17
Adding a Digi Device with drpadmin	18
Procedure	18
Deleting a Digi Device with drpadmin	19
Procedure	19
Transparent Printer Setup	19
About Transparent Printing.....	19
Configuring Transparent Printers.....	19
Procedure	20
Setup Examples for Transparent Printing.....	20
Example 1:.....	21
Example 2:.....	21
Example 3:.....	21
Setting TTY Options	21
fastbaud Data Rate Mapping	24

Introduction to RealPort

RealPort software can be installed on one or more host servers to provide local serial port functionality. RealPort can be used to provide standard system COM, AIO or TTY interfaces to control baud rate, parity, stop bits, and flow control of local serial ports. Any system utility or user application that works with a locally attached serial port should work with a Digi RealPort port.

Device Support

Digi's RealPort software works with all the Digi One and PortServer products and many EtherLite products.

About This Guide

Purpose

Use this guide to install and configure RealPort.

Audience

This guide is intended for the person responsible for installing and configuring RealPort. This person should have experience configuring network devices and be familiar with networking concepts.

Following are the conventions used in this document:

Conventions: Special Fonts

A special font is used for any input you need to enter. For example,

```
set config
```

Conventions: Square Brackets

Optional parameters are displayed within square brackets. For example,

```
set config [dhcp=on]
```

Note: The square brackets themselves are not actually part of the command, and should not be entered.

Conventions: Italics

Variables are displayed in italics. For example,

```
set config ip=ip-address
```

Note: Substitute an appropriate IP address for *ip-address* in the above command.

Conventions: Vertical Bar

A vertical bar character (|) is used to denote a choice (logical "or"). For example, `set flow=on|off`

Note: The above command would be entered as either:
`set flow=on` or `set flow=off`

Requirements and Considerations

Read this section before beginning the RealPort driver installation.

- The SCO OpenServer RealPort driver is compatible with SCO OpenServer System 5.0.4, 5.0.5, 5.0.6. The SCO OpenServer RealPort driver is not compatible with SCO UnixWare.
- Installing the RealPort software on a SCO OpenServer host where RealPort has already been installed necessitates the removal of the existing RealPort driver. During the removal of the previous driver, the user is prompted to save the old configuration.
- During a new installation of the driver, the system prompts the user to approximate the number of Digi devices that might be configured with RealPort. It is best to configure extra Digi devices during the initial RealPort configuration. By doing this, additional Digi devices can be connected later without relinking and rebooting the system.
- The Digi RealPort driver for SCO OpenServer is an installable device driver. The software development system is not required to create a new kernel.
- The RealPort package includes software developed by the OpenSSL project for use in the OpenSSL toolkit (<http://www.openssl.org>)
 - The OpenSSL software requires an external random number generator on the system. If you want to use the encrypted layer in the driver you must install PRNGD (Pseudo Random Number Generator Daemon)
 - The PRNGD package for Open Server is available at:
<ftp://ftp2.caldera.com/pub/skunkware/osr5/vols/prngd-0.9.23-VOLS.tar>
PRNGD is a third party software package and not supported by Digi Tech Support.

Information to Gather

Before you install RealPort, you need to determine:

- The hostname or IP address to assign each unconfigured Digi device.
- The number of ports for each Digi device. Include any Xem PORTS Module ports that are attached to the Digi device.
- Determine the link speed between the host machine and the Digi device if a slow WAN link (for example, a 56K leased line) connects them.

Configuring a Digi One RealPort, Digi One IA RealPort, or PortServer for RealPort

Use this procedure to configure a Digi One RealPort, Digi One IA RealPort,

or PortServer for use with Digi RealPort drivers.

Note: See the appropriate Command Reference or Configuration and Administration Guide for information on how to perform the steps below.

Procedure

1. Access a root prompt on the Digi device.
2. Set the Digi device's IP address.
3. Verify that the RealPort TCP port number is set to 771. Change if necessary.
4. For all ports that will be using RealPort, set the device type to rp. The following example configures ports 2 through 16 of a PortServer for RealPort:

```
set ports range=2-16 dev=rp
```

Setting Altpin

If you are using an 8-pin RJ-45 cable connecting a Digi serial port to a modem or printer, altpin must be set on the PortServer devices in order to get DCD signal functionality. Altpin can **not** be set in the device driver. To enable altpin on the Digi device, do the following:

1. Telnet to the Digi device by using the following command:

```
telnet ipaddress  
an example is: telnet 155.204.23.56
```

2. From the prompt, enter the following command:

```
set flow altpin=on range=port  
where port is the number or numbers of the ports
```

Configuring EtherLite for RealPort

Use this procedure to install and configure an EtherLite Terminal Server for use with Digi RealPort drivers.

Procedure

1. Attach the EtherLite module to the network using an appropriate cable.
2. Assign an IP address to the EtherLite module (see the following topic).

Assigning an IP Address

EtherLite IP addresses may be set by either of two methods:

- dgipserv, a UNIX utility for setting EtherLite IP addresses (see below)
- EtherLite Boot Console (see the EtherLite Administration Card)

Using dgipserv to Assign an IP Address

dgipserv is a Digi utility used to set the IP addresses for Digi devices. It will also set the gateway and subnet mask addresses when needed to upgrade the Digi device's firmware. For more information on dgipserv consult the man pages.

Note: **Note:** dgipserv will only work with firmware version 7.9 or later.

Procedure

1. Enter the command:

```
dgipserv
```

2. To store an IP addresses in your Digi device enter:

```
dgipserv -store MAC_address(IP_address)
```

where the MAC address and the IP address are the addresses of the Digi device. An example of this command is:

```
dgipserv -store 10:e0:f7:15:20:8g 143.182.5.63
```

Related Documentation

PortServer Documentation

- PortServer Configuration and Reference Guide
- Digi One/PortServer Cable Guide

PortServer II Documentation

- PortServer II Hardware Installation Guide
- PortServer II Command Reference
- PortServer II Configuration and Administration Guide
- Digi One/PortServer Cable Guide
- Digi Port Authority--Remote Device Monitor Setup Guide

PortServer TS 8/16 Documentation

- PortServer TS 8/16 Command Reference
- PortServer TS 8/16 Configuration and Administration Guide
- Digi One/PortServer Cable Guide
- Digi Port Authority--Remote Device Monitor Setup Guide

Digi One/PortServer TS 2/4 Documentation

- Digi One/PortServer TS 2/4 Quick Reference Card
- Digi One/PortServer TS 2/4 Command Reference
- Digi One/PortServer TS 2/4 Configuration and Administration Guide
- Digi One/PortServer Cable Guide
- Digi Port Authority--Remote Device Monitor Setup Guide

Digi One IA RealPort Documentation

- Digi One/PortServer TS 2/4 Command Reference
- Digi One/PortServer TS 2/4 Configuration and Administration Guide
- Digi One/PortServer Cable Guide
- Digi Port Authority--Remote Device Monitor Setup Guide

EtherLite Documentation

- EtherLite Hardware Information Guide

- EtherLite Administration Card
- EtherLite Cable Guide

Master Setup Process

Use this process to install and configure the SCO OpenServer RealPort driver.

1. Read any release notes that may be included with the installation media.
2. Gather information necessary for installation. See "Information to Gather" on page 9.
3. Install the RealPort driver. "Installing the Driver: Downloaded" on page 13.
4. Configure the PortServer for RealPort. See "Configuring a Digi One RealPort, Digi One IA RealPort, or PortServer for RealPort" on page 9, or "Configuring EtherLite for RealPort" on page 10.

Installing the Driver: Downloaded

Use this procedure to install a downloaded SCO OpenServer driver.

Procedure

1. Download the appropriate driver package file.
2. Copy the downloaded package file to a directory on the SCO OpenServer system.
3. Log in as root on the SCO OpenServer system.
4. Change to the directory into which you copied the package file.
5. Enter the following command:
`custom -i -p misc:drp -F `pwd`/file_name`
6. where *file_name* is the name of the downloaded driver package.
7. Follow the prompts.

Note: In order to prevent having to reboot your system (and potentially losing all previous settings) make an estimate of devices to accommodate future additions. If you underestimate the number of devices to add, the system will prompt you to verify that you want to add more devices and you must reboot for the devices to function. Estimating a high number will prevent you from having to reboot.

8. Reboot the system when the installation is complete.

The RealPort package includes software developed by the OpenSSL project for use in the OpenSSL toolkit (<http://www.openssl.org>)

- The OpenSSL software requires an external random number generator on the system. If you want to use the encrypted layer in the driver you must install PRNGD (Pseudo Random Number Generator Daemon)

- The PRNGD package for Open Server is available at:

<ftp://ftp2.caldera.com/pub/skunkware/osr5/vols/prngd-0.9.23-VOLS.tar>

PRNGD is a third party software package and not supported by Digi Tech Support.

Uninstalling RealPort

The Digi device driver software can be removed from the kernel by using custom. The Development Kit is not required, although the link kit must be installed.

1. Log onto the console as super-user (root), and enter this command:
custom
2. Choose Software > Remove from the menu that appears.
3. Choose Digi RealPort.
4. Exit custom.
5. Enter the following command to shut the system down and boot the new kernel:

```
shutdown -y -g0
```

RealPort Devices

The RealPort installation creates four different devices for each port in the /dev directory.

- Standard device
- Modem device
- Standard transparent print device
- Modem transparent print device.

Device Name Format

The devices are named according to the following conventions:

Syntax	Description
a-z/aa-zz	The Digi device letter ID. Single or double characters can be used.
01-64	The port number on the individual Digi device.
lowercase letter	At the end of a device name indicates a standard device.
uppercase letter	At the end of a device name indicates a modem device.

Here are examples of the devices for the first port of a Digi device with the identification letter "a":

Device	Path/Name Example
Standard Device	/dev/ttya01
Modem Device	/dev/ttyA01
Standard Transparent Print Device	/dev/praa01

Modem Transparent Print Device	/dev/prA01
--------------------------------	------------

Standard Device

Example: /dev/ttya01

A standard Digi device uses a lowercase identification letter in their names. The default handshake method is XON/XOFF. Data Carrier Detect (DCD) need not be present to open the device.

Once a connection is established and DCD becomes active, standard devices behave in the same way as modem devices--subsequent loss of the Data Carrier Detect signal will cause active processes on the port to be killed and the user will be automatically logged off.

Modem Device

Example: /dev/ttyA01

Digi modem devices use an uppercase identification letter in their names. They are sometimes referred to as "dial-in" devices.

Modem devices are traditional Unix ports with modem control. They require Data Carrier Detect to be high before they will operate. RTS/CTS handshaking is enabled by default. When used with a modem, the ports will wait for carrier before sending out the login: prompt

When used with a terminal or other device, it is usually wise to wire the Digi DCD signal to the terminal's Data Terminal Ready (DTR) line. When the terminal is turned on, the system outputs a login prompt. When the terminal is turned off, any associated jobs are killed, and the user is logged out.

Transparent Print Devices

Examples: /dev/prA01 and /dev/prA01

The transparent print devices can be used with auxiliary printer ports on terminals. Output directed to a pr device goes out the auxiliary port of a terminal while you continue to use the terminal normally.

Use pra01 if the terminal device is ttya01 (standard device); use prA01 if the terminal device is ttyA01 (modem device).

Configuring a Device for a Terminal

Use this procedure to configure a Digi serial device for a terminal. See your operating system documentation for more information on configuring a serial device for a terminal.

Procedure

1. Connect a serial cable between the port and terminal.
2. Edit the /etc/inittab file on the SCO OpenServer system. Change the device to the proper speed, data bits, stop bits and parity bit. Do this by editing the letter or number at the end of the line for the port (the default is m, which corresponds with 9600 8,1,N). See /etc/gettydefs for /etc/inittab letter and number definitions.
3. Enable the port for login by entering this command at a prompt:

```
enable device
```

where *device* is the name of the Digi device.

Configuring a Device for a Printer

Use this procedure to configure a Digi serial device for a printer. Consult your operating system documentation for more information on configuring a serial device for a printer.

Note: If you are using an 8-pin RJ-45 cable connecting a Digi serial port to a modem or printer, *altpin* must be set on the PortServer devices in order to get DCD signal functionality. *Altpin* can **not** be set in the device driver. For information on how to set *altpin*, see "Setting *Altpin*" on page 10

Procedure

1. Connect a proper cable between the port and printer.
2. If you wish to set up a print spooler, enter the following command at a root prompt:

```
scoadmin printer
```

See your SCO OpenServer documentation for information on *scoadmin*.

3. Reboot the system or enter the *ditty* command manually for the new settings to take effect.

Configuring a Device for a Modem

Use these procedures to configure a Digi serial device for a Dial-in/Dial-out modem connection. Configuring a device for a modem requires familiarity with both the operating system and the modem being used. While the following procedure is sufficient for most cases, it may be necessary to take additional steps to properly configure your modem or to set up the operating system for a specific application.

Note: If you are using an 8-pin RJ-45 cable connecting a Digi serial port to a modem or printer, *altpin* must be set on the PortServer devices in order to get DCD signal functionality. *Altpin* can **not** be set in the device driver. For information on how to set *altpin*, see "Setting *Altpin*" on page 10

Procedure: Configuring the UNIX Device

1. Connect a serial cable between the port and modem.
2. Power the modem on.
3. Edit the */etc/inittab* file on the SCO OpenServer server. Change the upper-case device to the letter *o* by editing the letter or number at the end of the line for the device. See */etc/gettydefs* for *inittab* letter and number definitions.
4. Disable the modem control and non modem control devices for the port by entering:

```
disable modem-control-device  
disable non-modem-control-device
```

where *modem-control-device* is the name of the modem control device for the port and *non-modem-control-device* is the name of the non modem control device for the port.

5. Edit the file */usr/lib/uucp/Devices*. Add a Direct line for the device like this:

Direct ttyh1a - 38400 direct device

The "D" in Direct must be the first character on the line.

Procedure: Configuring Modems for Dial-in

1. Comment out any ACU lines relating to this device until dial-in is working properly.

Note: Some applications may require an ACU entry in the Devices file. If an application requires an entry, refer to the modem manual or to the modem manufacturer for the correct modem initialization string, and to the SCO OpenServer Administration handbook for guidance on setting up an appropriate ACU entry that uses this initialization string.

2. Connect to the modem. At a root prompt, enter this command

```
cu -l /dev/device -s 38400
```

where *device* is the name of the non modem control device for the port.

3. Set the modem to answer after the first ring with this command:

```
ats0=1
```

4. Enter the following command to train the modem to the port speed:

```
at&w
```

5. Enter any other desired modem commands.

6. Disconnect from the modem by entering a tilde and a period:

```
~.
```

7. Configure flow control on the port. Hardware flow control is typical and can be configured by inserting this command at the end of the file `/etc/rc.d/8/userdef`:

```
ditty rtSPACE ctSPACE -ixon device
```

Note: The ditty command is not supported for EtherLite devices. Use standard operating system tools (scoadmin or stty) to set device options for EtherLite devices.

8. To add dial-in capability, enter this command at a root prompt:

```
enable device  
an example is: enable ttyA01
```

In SCO OpenServer, the uppercase device name is for dial-in, the lowercase name is for dial-out and modem configuration.

Adding or Removing Digi Devices

The new Digi RealPort driver allows a user to add or remove Digi devices on their systems without having to relink or reboot the kernel each time a device is added or removed. This feature is achieved with the *drpadmin* utility.

During the driver package installation, the user is prompted to reserve additional devices to accommodate future additions. No other information is requested at that time. If the user, however, underestimates the number of Digi devices and needs to add more devices at a later date, the *drpadmin* utility allows the user to add devices as needed. These new *unreserved* devices require the kernel be relinked. The *drpadmin* utility relinks the unreserved devices automatically, but the user must perform a

system reboot to load the new kernel.

Adding a Digi Device with drpadmin

Use this procedure to create RealPort devices and start the RealPort daemons.

Procedure

1. Enter this command at a root prompt:

```
/usr/bin/drpadmin
```

2. Answer the prompts as appropriate.

Prompt	Action
Select an option	Choose add.
Enter the host name or IP address for this Digi device	If an IP address is used, make sure it is unique and does not conflict with any other network device. If a name is entered, the name must be registered in /etc/hosts or with an accessible nameserver.
Enter the number of ports on the Digi device	Enter the number of ports for this Digi device. The installation will prompt to confirm this number. Note: If PORTS/Xem (EBI) modules will be attached to a PortServer II module, include these ports.
Enter TTY device ID letter(s)	Enter one or two letters. These letters will be used to create the RealPort device names.
Would you like this RealPort session to be encrypted?	If you want the session encrypted enter always. The session will always remain encrypted. If unable to create an encrypted session it will fail to work. If you do not want the session encrypted enter never. The session will never use encryption. Note: Check your documentation to verify if your Digi device supports Encrypted RealPort.
Enter WAN speed if the connection between the Digi device and HP-UX system includes a WAN link slower than 1 MB	Enter the WAN speed if this is the case. Otherwise, choose Enter to continue.
Confirm the configuration	Enter y to proceed or n to reenter the information.

Select an option	Enter a to add another Digi device. Enter s to show configured Digi devices. Enter q to exit drpadmin.
------------------	--

Note: To verify your configuration enter

```
ditty -a/dev/ttyxx
```

where xx is the device port number beginning with a zero. The system will return the tty settings.

Deleting a Digi Device with drpadmin

Use this procedure to delete a Digi device.

Procedure

1. Enter this command at a root prompt:

```
/usr/bin/drpadmin
```

2. Enter s to show all installed Digi devices.
3. Note the number of the Digi devices to delete.
4. Choose Enter to make the options prompt reappear.
5. Enter d (delete).

Note: r = reset - this kills the daemon and then restarts it.
s = show - displays the host name, IP address, and other information

6. Enter the Digi device number to delete.
7. Enter y to confirm the deletion.

Transparent Printer Setup

About Transparent Printing

Most terminals have an auxiliary port that can be connected to a serial printer. When this port is configured as a transparent printer port, print jobs may be run simultaneously with normal terminal operation.

Data bound for the printer is preceded by a terminal escape sequence which turns on transparent printing, and followed by a sequence which turns transparent printing off.

Set up a transparent printer in the same way you would set up a printer wired directly to a serial port. Data sent to a transparent printer device is automatically "wrapped" in the transparent print on/off command strings for the specified printer.

Configuring Transparent Printers

Use this procedure to set up transparent printers on terminals.

Note: This procedure sets up the communication characteristics for transparent printers. Once a transparent printer has been set up, you can use it as you would a printer connected directly to a serial port. See your UNIX documentation for information on setting up print queues.

Procedure

At the command prompt, enter:

```
ditty -n ttyname [options]
```

where *ttyname* is the name of the terminal device and options are selected from the list below..

Option	Description
maxcps <i>n</i>	Limits the maximum printer port character-per-second data rate. <i>n</i> should be set to the minimum character rate the printer can sustain in typical use.
maxchar <i>n</i>	Limits the number of characters queued to the printer ahead of terminal output. Lower numbers increase system overhead, higher numbers result in keystroke echo delays. A value of 50 is generally a good compromise at 9600 baud.
bufsize <i>n</i>	This parameter should be set to a value just below the printer's buffer size. After a period of inactivity, the driver will burst up to this many characters to the printer to fill the print buffer before slowing to the maxcps rate.
onstr "s"	Defines the terminal escape sequence to direct subsequent data to the transparent printer. s is a string of ASCII characters, enclosed in quotes, that command the terminal to enter transparent printing mode. An arbitrary octal character xxx may be given as \xxx. For example, the sequence "<Esc>[5i" would be entered as: "\033[5i".
offstr "s"	Defines the terminal escape sequence to stop directing data to the printer. s is a string of ASCII characters, enclosed in quotes, that command the terminal to enter transparent printing mode. An arbitrary octal character xxx may be given as \xxx. For example, the sequence "<Esc>[4i" would be entered as: "\033[4i".
term <i>t</i>	Sets the transparent printer on/off strings to values found in the internal default table. Internal defaults are used for the following terminal types: adm31, ansi, dg200, dg210, hz1500, mc5, vt100, vt220, vt320, vt420, wang2x36, wyse30, wyse50, wyse60 or wyse75. If the terminal type is not found in the internal default table, then ditty reads the terminfo entry for the terminal type and sets the transparent print on/off strings to the values given by the mc5/mc4 attributes found there.

Setup Examples for Transparent Printing

Use the ditty program to set up your terminal for transparent printing.

Example 1:

The following command configures the transparent print options for a DEC VT100 terminal connected to /dev/ttya01 (note that the printer will be called /dev/pra01). maxcps, maxchar and bufsize are left to defaults. Enter:

```
ditty term vt100 /dev/ttya01
```

Example 2:

The following example uses onstr and offstr arguments (this sets the terminal to use ANSI Standard). Again maxcps, maxchar, and bufsize are defaults. Enter (on a single command line):

```
ditty onstr \033[5i offstr \033[4i /dev/ttya01
```

Example 3:

This example command sets the transparent print option for a WYSE30 terminal, with maxcps of 75, a maxchar of 100, and a printer buffer size, bufsize, of 1000. Enter (on a single command line):

```
ditty term wyse30 maxcps 75 maxchar 100 bufsize 1000 /dev/ttya01
```

Setting TTY Options

RealPort UNIX device driver packages include a command, ditty, which is a superset of stty, and may be used to set and display the device options for Digi RealPort devices.

The general command format is:

```
ditty [-a] [-n ttyname] [option(s)] [ttyname]
```

With no options, ditty displays all Digi special driver settings, modem signals, and all standard parameters displayed by stty(1) for the TTY device referenced by standard input.

Command options are provided to change flow control settings, set transparent print options, force modem control lines, and display all TTY settings. Any unrecognized options are passed to stty(1) for interpretation.

ditty commands may be executed from the command line, or placed in a startup script to be run whenever the system is booted.

The options are:

- a Display all of the unique Digi option settings, as well as all of the standard TTY settings reported by stty -a.
- n Set and display options for the given TTY device, instead of
- ttyname* standard input. This option may be specified multiple times to perform the same operation on multiple TTYs.
- ttyname* Set and display options for the specified TTY device. Replace *ttyname* with the TTY pathname (such as /dev/ttya01s, /dev/term/a01 or /dev/dty/a001s, depending on your operating system). This option may be used on a modem control line when no carrier is present.

The following options specify transient actions to be performed

immediately:

Option	Action
break	Send a 250 MS break signal out on the TTY line.
flush	Immediately flush (discard) TTY input and output.
flushin	Flush TTY input only.
flushout	Flush TTY output only.

The following options specify actions which are not sticky, meaning that the changes are cancelled when the device is closed, and that the device will use the default values the next time it is opened.

Option	Actions
stopout	Stop output exactly as if an XOFF character were received.
startout	Restart stopped output exactly as if an XON character were received.
stopin	Activate flow control to stop input.
startin	Release flow control to resume stopped input.
[-]dtr	Raise [drop] the DTR modem control line, unless DTR hardware flow control is selected.
[-]rts	Raise [drop] the RTS modem control line, unless RTS hardware flow control is selected.

The following options are sticky—the effects continue until the system is rebooted or until the options are changed.

Sticky	Description
[-]fastbaud	Alter the baud rate tables to permit the use of data rates that are beyond the range supported by the operating system. See "fastbaud Data Rate Mapping" on page 24.
[-]rtspace	Enable [disable] RTS hardware input flow control, so RTS drops to pause remote transmission.
[-]ctspace	Enable [disable] CTS hardware output flow control, so local transmission pauses when CTS drops.
[-]dsrpace	Enable [disable] DSR hardware output flow control, so local transmission pauses when DSR drops.
[-]dcdpace	Enable [disable] DCD hardware output flow control, so local transmission pauses when DCD drops.
[-]dtrpace	Enable [disable] DTR hardware input flow control, so DTR drops to pause remote transmission.

Sticky	Description
<code>[-]forcedcd</code>	Disable [re-enable] carrier sense, so the TTY may be opened and used even when carrier is not present.
<code>startc c</code>	Sets the XON flow control character. The character may be given as a decimal, octal or hexadecimal number. Octal numbers are recognized by the presence of a leading zero, and hexadecimal numbers are denoted by a leading "0x". For example, the standard XON character, <CTRL-Q>, can be entered as "17" (decimal), "021" (octal) or "0x11" (hexadecimal).
<code>stopc c</code>	Sets the XOFF flow control character. The character may be given as a decimal, octal, or hexadecimal number (see <code>startc</code> , above, for format of octal and hexadecimal numbers).
<code>astartc c</code>	Sets auxiliary XON flow control character. The character may be given as a decimal, octal, or hexadecimal number (see <code>startc</code> , above, for format of octal and hexadecimal numbers).
<code>astopc c</code>	Sets auxiliary XOFF flow control character. The character may be given as a decimal, octal, or hexadecimal number (see <code>startc</code> , above, for format of octal and hexadecimal numbers).
<code>[-]aixon</code>	Enables auxiliary flow control, so that two unique characters are used for XON and XOFF. If both XOFF characters are received, transmission will not resume until both XON characters are received.
<code>maxcps n</code>	Sets the maximum Characters Per Second (CPS) rate at which characters are output to the transparent print device. The rate chosen should be just below the average print speed. If the number is too low, printer speed will be reduced. If the number is too high, the printer will resort to flow control, and user entry on the terminal will be correspondingly impaired. Default is 100 CPS.
<code>maxchar n</code>	Sets the maximum number of transparent print characters the driver will place in the output queue. Reducing this number increases system overhead; increasing this number delays operator keystroke echo times when the transparent printer is in use. Default is 50 characters.
<code>bufsize n</code>	Sets the driver's estimate of the size of the transparent printer's input buffer. After a period of inactivity, the driver bursts this many characters to the transparent printer before reducing to the <code>maxcps</code> rate selected above. Default is 100 characters.

Sticky	Description
onstr "s"	<p>Defines the terminal escape sequence to direct subsequent data to the transparent printer.</p> <p>s is a string of ASCII characters, enclosed in quotes, that command the terminal to enter transparent printing mode. An arbitrary octal character xxx may be given as \xxx.</p> <p>For example, the sequence <Esc>[5i would be entered as: "\033[5i".</p>
offstr "s"	<p>Defines the terminal escape sequence to stop directing data to the printer.</p> <p>s is a string of ASCII characters, enclosed in quotes, that command the terminal to enter transparent printing mode. An arbitrary octal character xxx may be given as \xxx.</p> <p>For example, the sequence <Esc>[5i would be entered as: "\033[5i".</p>
term t	<p>Sets the transparent printer on/off strings to values found in the internal default table. Internal defaults are used for the following terminals: adm31, ansi, dg200, dg210, hz1500, mc5, microterm, multiterm, pcterminfo, tvi, vp-a2, vp-60, vt52, vt100, vt220, wyse30, wyse50, wyse60, or wyse75. If the terminal type is not found in the internal default table, then ditty reads the terminfo entry for the terminal type and sets transparent print on/off strings to values given by the mc5/mc4 attributes found there.</p>

fastbaud Data Rate Mapping

Use the table below to see how setting fastbaud affects RealPort data rates.

Specified Data Rate:	Data Rate Mapped to:
50	57600
75	76800
110	115200
134	131657
150	153600
200	230400
300	460800