



Test a WR31 Router

How to test a WR31 router step by step.

Technical Support

March 2016

Contents

1	Introduction	3
1.1	Outline	3
1.2	Assumptions	3
1.3	Corrections	3
1.4	Version	3
2	Physical Configuration	4
2.1	Equipment Required	4
2.1.1	Diagram	5
3	Step by Step Instructions	6
3.1	Install FlashWriter	6
3.2	Download the .ALL file:	6
3.3	Make the initial connections	6
3.4	Launch FlashWriter	7
3.5	Reviewing Flashwriter error messages	15
4	Check LEDs	16
5	Check W-WAN connectivity	17
5.1	Test SIM detection switch	17
5.2	Test SIM 1	18
5.3	Test SIM 2	20
6	Check W-WAN Signal Strength	22
7	Check USB ports	23
8	Check ETH ports 1 and 2	24
9	Check Serial ports	25

1 INTRODUCTION

1.1 Outline

Should it happen that the boot loader becomes corrupted on a WR31 product, it is possible for an end user to re-load the boot loader by following this guide.

The symptoms of a corrupted boot loader are usually as follows. When applying the power, the only LED to illuminate is the power LED. It is also possible that other “unusual” LED patterns may occur depending upon how “damaged” the boot loader is.

1.2 Assumptions

This guide has been written for use by technically competent personnel with a good understanding of the communications technologies used in the product and of the requirements for their specific application.

This quick note applies only to:

Model: Digi Transport WR31

1.3 Corrections

Requests for corrections or amendments to this documentation are welcome and should be addressed to: tech.support@digi.com

Requests for new quick notes can be sent to the same address.

1.4 Version

Version Number	Status
0.1	Draft
1.0	Completed 15.03.2016

2 PHYSICAL CONFIGURATION

2.1 Equipment Required


A PC running a Microsoft Windows™ based operating system.

1. A PC connected to the Internet running a Microsoft Windows™ operating system with a built in serial comm. port. (USB to serial adaptors do not work well.)
2. A 9-way “straight through” serial cable to connect the PC directly to the WR31.
3. A “USB A to **USB A**” cable to connect the PC directly to the WR31. (No mistake, A to A)
4. An Ethernet switch/hub to connect the PC to the WR31 (usually your normal office Ethernet switch/hub will be fine if there is a spare port)
5. CAT 5 cables to connect the WR31 and PC to the Ethernet switch.

How to test a WR31 router step by step.

2.1.1 Diagram

The following diagram represents how the equipment will be connected during the repair process:

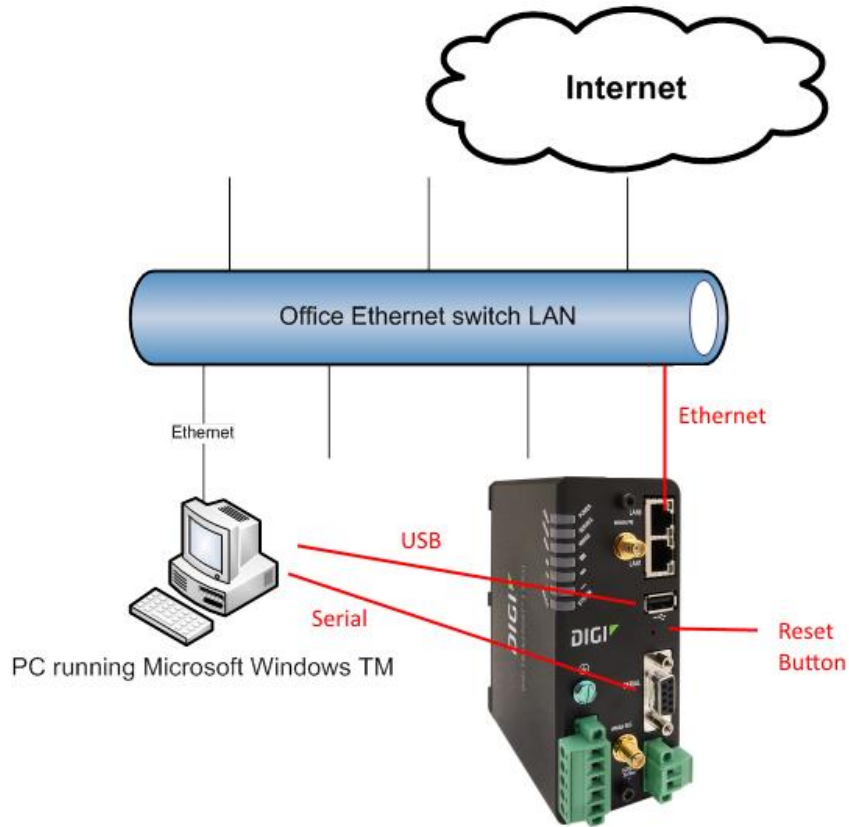

The internet connection is not essential but may be useful during troubleshooting. It is essential that the PC's Ethernet communication interface is configured correctly (e.g. it has an IP address)

Also note that the Ethernet switch/hub used must have spanning tree protocol disabled.

3 STEP BY STEP INSTRUCTIONS

3.1 Install FlashWriter

Install the latest version of FlashWriter from the following link:

<http://ftp1.digi.com/support/firmware/FlashWriter.msi>

3.2 Download the .ALL file:

Download the following zip file to your PC and extract all the contents to a single folder


<http://ftp1.digi.com/support/firmware/transport/flashwriter/latest/wr31-flashwriter-x.x.x.x.zip>

Click: <http://ftp1.digi.com/support/firmware/transport/flashwriter/latest/>

where **X.X.X.X** is the current firmware version.

- Open the .ini file extracted and add the following text to the second line (be sure to include the comma at the end).

```
bootimx28,
```

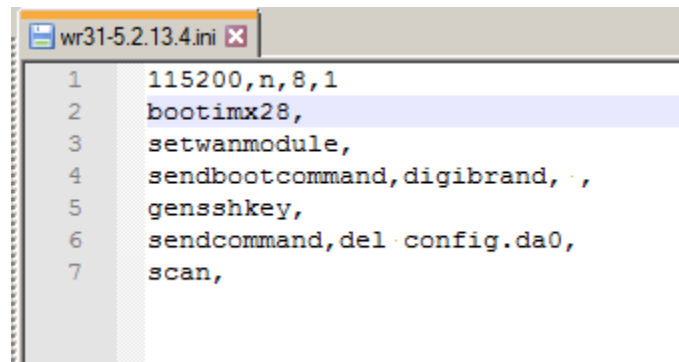

```
wr31-5.2.13.4.ini x
1 115200,n,8,1
2 bootimx28,
3 setwanmodule,
4 sendbootcommand,digibrand, ,
5 gensshkey,
6 sendcommand,del config.da0,
7 scan,
```


3.3 Make the initial connections

1. Connect the “straight-through” serial cable between the PC and the “Serial 0” on the WR31.
2. Connect the WR31’s Ethernet (LAN 0) port to your “office network”.
3. Ensure the PC is also connected to the same “office network”
4. Connect one end of the “USB A to USB A” lead to your PC. Do **NOT** connect to the other end to the WR31 yet.

How to test a WR31 router step by step.

3.4 Launch FlashWriter


Launch Flashwriter from the start menu. Select the communications port number (PC comm. port number) to which the WR31 is connected. (On most PC's with a built in serial port, this will be "1" OR "2". Leave the other settings at their default values (TFTP and Event driven mode ONLY ticked):

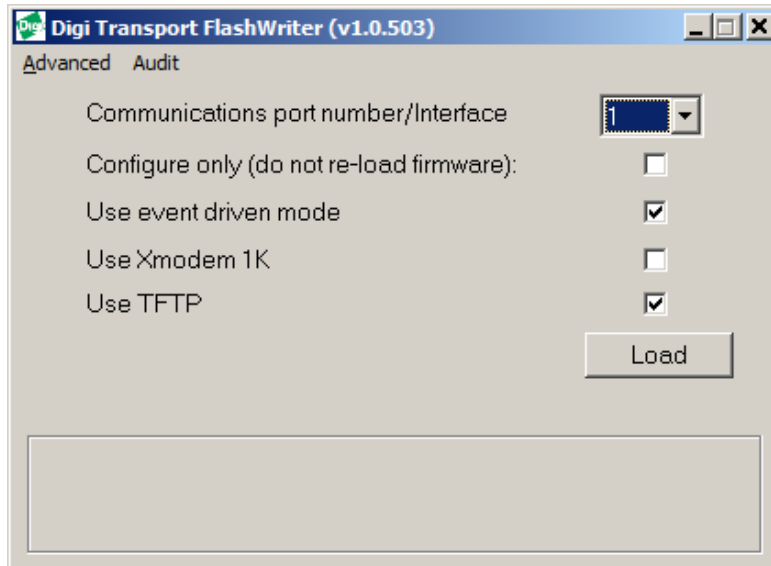

Click Load


If your PC has more than one network adapter, be sure to select the one that represents the connection to "Office Network" illustrated in 0.

If your PC only has a single network adapter this screen will not appear:

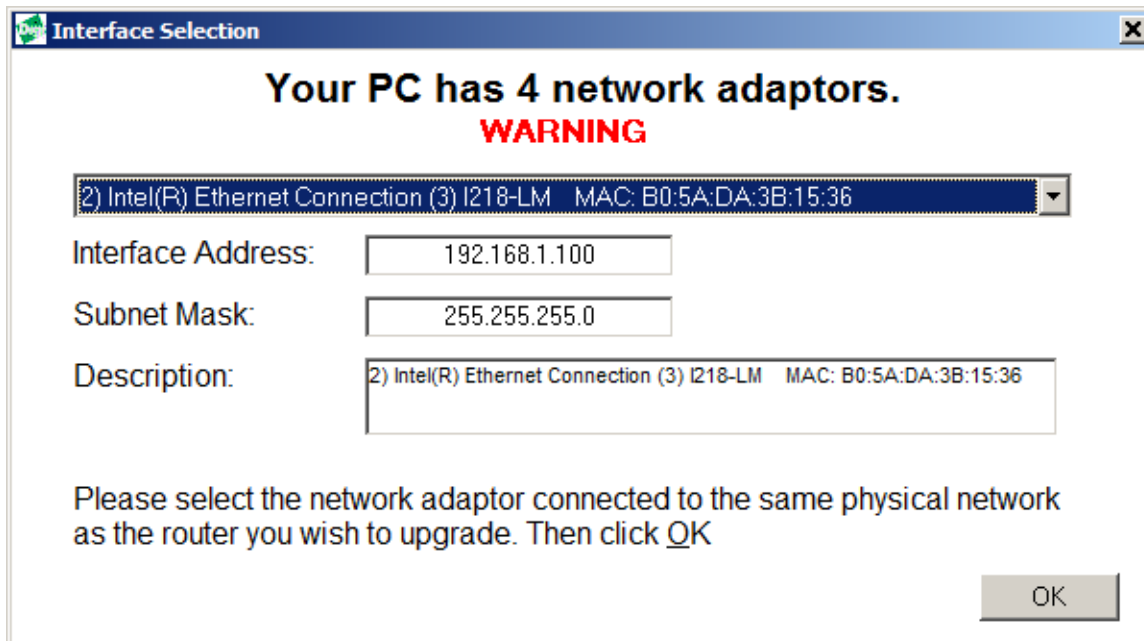


How to test a WR31 router step by step.

In the file dialogue, select the “ALL” file you extracted from the ZIP earlier:

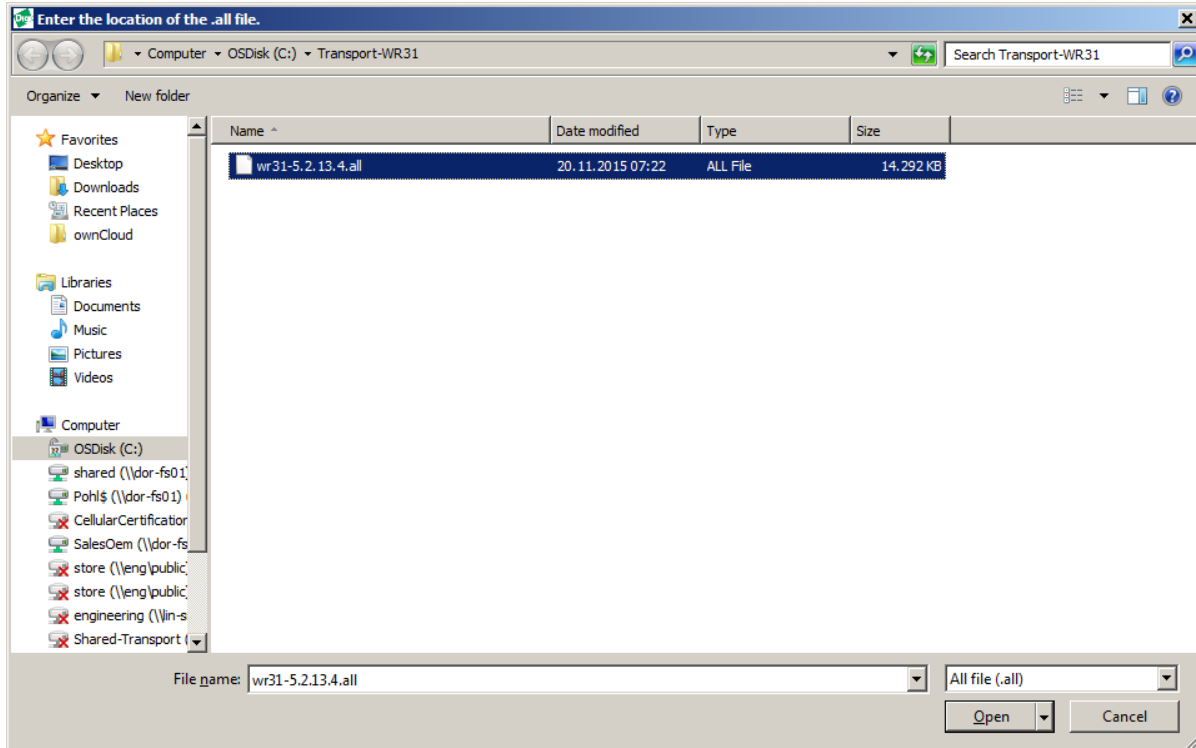

And click “Open”.

The following message will appear:

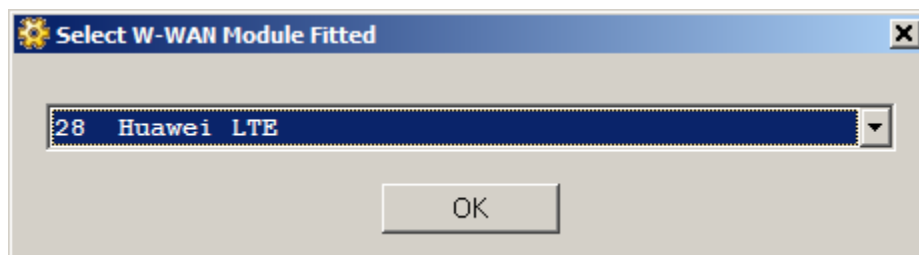

It is critical that the correct selection is made at this point. Note characters 6 and 7 of the part number (SKU) on the approval label. In the example below these are “L1”:

How to test a WR31 router step by step.




Refer to the following table to determine which selection to make:

How to test a WR31 router step by step.

Characters 6 & 7	Flashwriter Selection
00	100 No module
G1	5 Cinterion/Siemens MC75i/TC63i/MC75/Triorail
E1	5 Cinterion/Siemens MC75i/TC63i/MC75/Triorail
H0	9 Option HSDPA/HSUPA modules
H1	9 Option HSDPA/HSUPA modules
H2	9 Option HSDPA/HSUPA modules
C0	10 CMotech CDMA module
C1	11 Sierra Wireless CDMA module
C2	11 Sierra Wireless CDMA module
C3	10 CMotech CDMA module
C4	10 CMotech CDMA module
C6	10 CMotech CDMA module
C7	10 CMotech CDMA module
U0	9 Option HSDPA/HSUPA modules
U1	9 Option HSDPA/HSUPA modules
U2	13 Ericsson F3507g/F3607gw/F3307/F5521gw HSDPA module
U3	7 Sierra Wireless 3G module
U4	13 Ericsson F3507g/F3607gw/F3307/F5521gw HSDPA module
U5	17 Gobi UMTS or 18 Gobi CDMA
U6	13 Ericsson F3507g/F3607gw/F3307/F5521gw HSDPA module
U7	13 Ericsson F3507g/F3607gw/F3307/F5521gw HSDPA module
U8	17 Gobi UMTS
U9	24 Telit 3G
L1	28 Huawei LTE
L2	23 Novatel LTE
L3	23 Novatel LTE
L4	26 Sierra Wireless 4G/LTE module
L5	26 Sierra Wireless 4G/LTE module
L6	29 Telit LTE
L7	29 Telit LTE
L8	29 Telit LTE
L9	29 Telit LTE

The next screen provides some complex instructions:

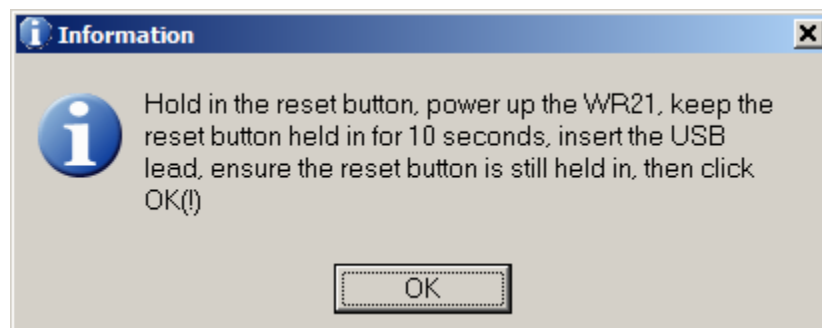


Please ignore that it might show WR21, all is correct.


The instructions are broken down below for extra clarity:

How to test a WR31 router step by step.

1. Using a thin screwdriver or a paperclip, keep the reset button pressed. Be careful to press soft, but firm.
2. Insert the power lead – note that this is a locking barrel connector. It needs to be aligned carefully and then twisted to prevent it from coming detached.
3. Keep the reset button held in for 10 full seconds. (When you let go of the reset button there should be no change of the LED status – if there is you have not held it in for long enough.)
4. Within 15 seconds, insert the USB lead (that already has the other end connected to the PC) into the WR31. At this point the PC should detect the WR31 and may need to install some USB drivers. Wait for the PC to do this. (If nothing happens on the PC, then it may be that the reset button was not held in for long enough, go back to step 1 and try again.)
5. Whilst the reset button is held, click OK in FlashWriter
6. If successful, you should be prompted to enter the 6 digit serial number. (Refer to the label under the WR31 to find the serial number. Please ignore a leading 'S'). Please ensure that you enter the correct serial number as a wrong serial number would cause a wrong MAC-Address!

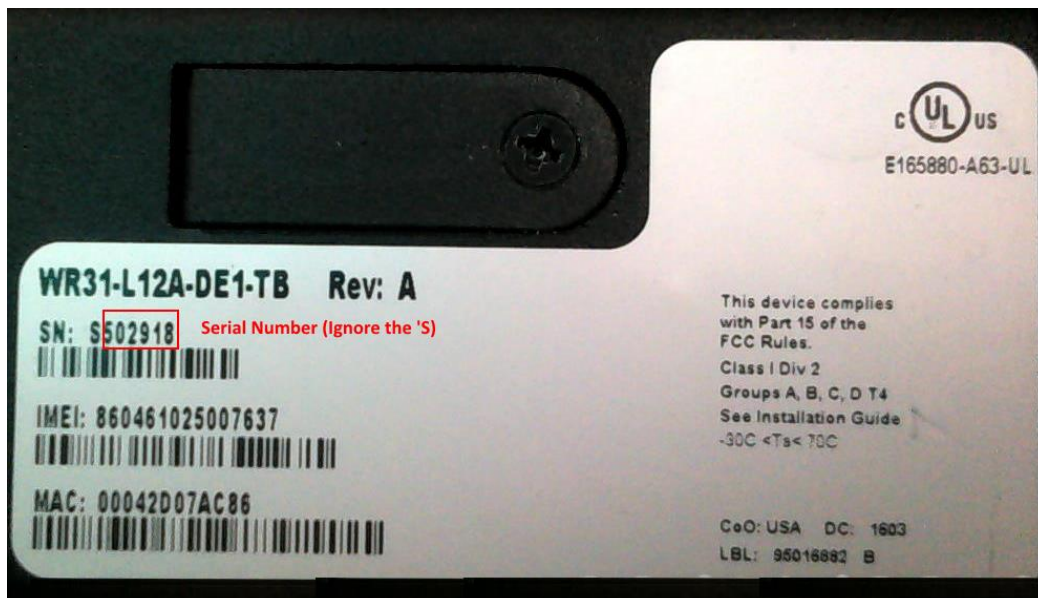


How to test a WR31 router step by step.

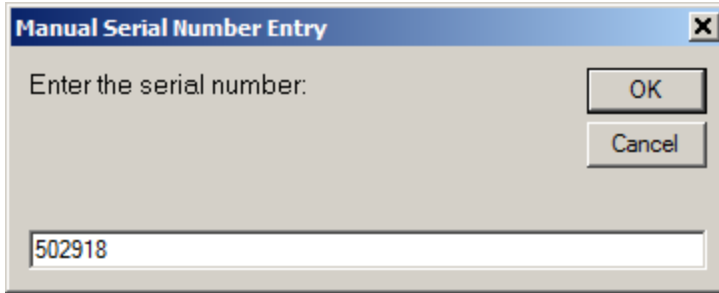

A dialog box titled "Manual Serial Number Entry" with a close button (X) in the top right corner. It contains the text "Enter the serial number:" followed by "OK" and "Cancel" buttons. Below the text is a text input field containing the serial number "502918".

Click OK

7. If successful, you should be prompted to enter the hardware revision number. (Refer to the label under the WR31 to find the correct hardware revision.)

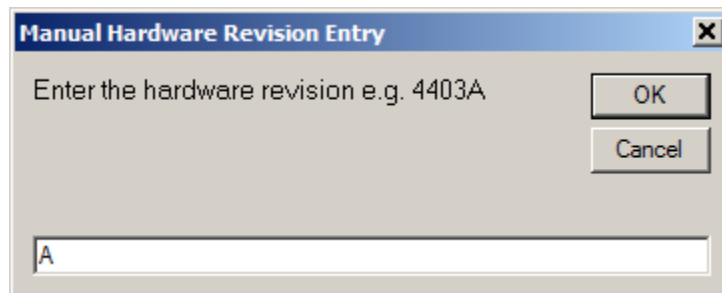


A dialog box titled "Manual Hardware Revision Entry" with a close button (X) in the top right corner. It contains the text "Enter the hardware revision e.g. 4403A" followed by "OK" and "Cancel" buttons. Below the text is a text input field containing the hardware revision "A".


Click OK

How to test a WR31 router step by step.

8. You should see the .sbios file start to load:

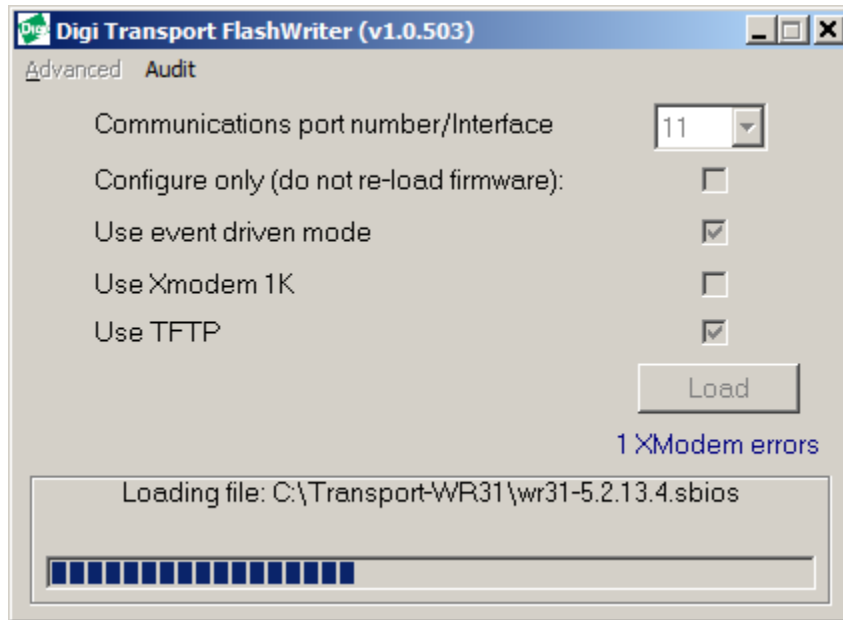


After programming in the W-WAN counter and other options, next the .ALL file will start to load:

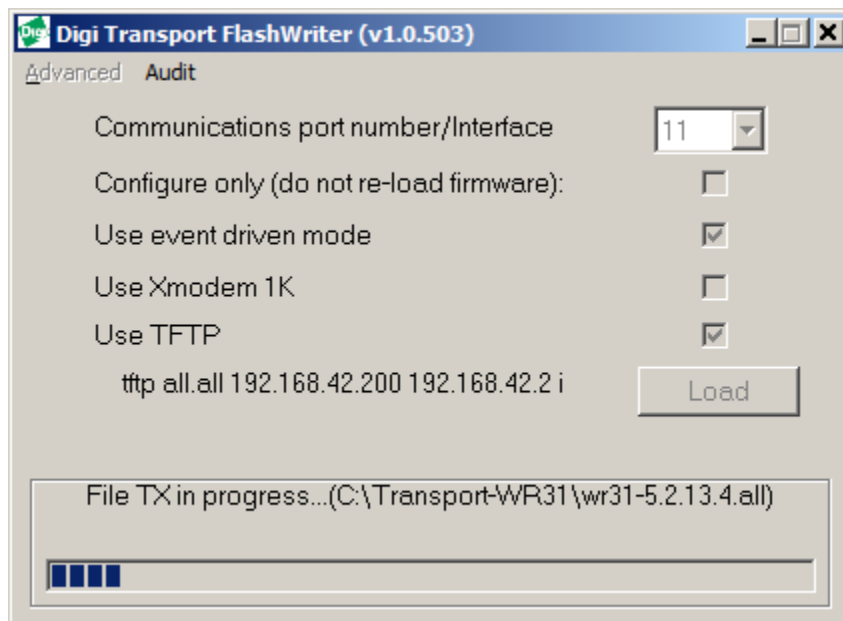

9. After reboot and checks, the following message should be displayed:

How to test a WR31 router step by step.

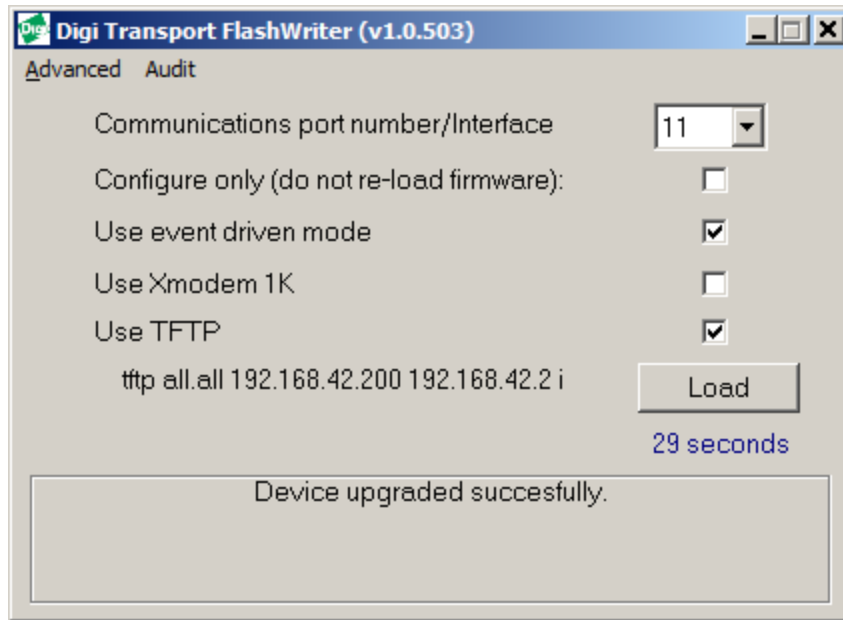

This means the WR31 has been successfully recovered.

10. Please remove the USB Cable when you have finished FlashWriter as it might disturb the further testing procedure!

At this stage the following hardware components (and more) have been successfully tested:

- FLASH
- SDRAM
- SRAM
- ETHERNET 0
- Serial port 0
- Interface to radio module (if fitted)

3.5 Reviewing Flashwriter error messages

If during the previous session an error occurred, please check the table below for the recommended course of action:

Error Message	Recommendation
Failed to establish contact via the serial port, please try again.	This procedure is quite tricky so it is quite possible you did not get the timing quite correct. However if you can get passed this stage repeatedly on a known working WR31 and this particular WR31 always fails it must be faulty. Please create an RMA with reason Flashwriter IMX28 boot failed.
XModem TX failure on pre-loading bootloader.	Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Flashwriter XModem TX failure on pre-loading bootloader.
XModem did not initialise!	Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Flashwriter XModem did not initialise!
sbios upload not confirmed by unit.	Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Flashwriter sbios upload not confirmed by unit.
Scan failed DO NOT remove power from unit.	Ignore the message, remove the power try again. Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Flashwriter scan failed.
Error re-accessing bootloader, >> prompt not received after sending password.	Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Error re-accessing bootloader, >> prompt not received after sending password.
Unit did not reboot successfully after loading bootloader.	Check that this repeatedly fails and that you can carry out the procedure correctly on a known working router. If so then please create an RMA with reason Flashwriter: Unit did not reboot successfully after loading bootloader.
Unable to start TFTP	Check that the Ethernet cable is connected correctly and the LAN LED is on. This error can often be "user error" or "network issues". However if this error is repeatable on the suspected bad router but does not occur on a known good router then request an RMA with reason. "Flashwriter TFTP failed to start"
Blue progress bar moves, but slowly and with lots of re-tries and eventually fails.	This suggests a hardware problem or a network issue on your LAN. Check again that this works on a known good router, if it does and it still fails with this error on the suspected bad router then request an RMA with reason. "Flashwriter TFTP failed to complete"
Unable to communicate with device after reboot	Check to see if the router is continuously rebooting. Please contact Digi technical support for help.
W-WAN module failed check - please check you selected the correct module!	Be very careful to check that you are selecting the correct radio module when you launch FlashWriter. This is the number one cause of this error! If you are unsure of the type of radio module fitted open the case. If you are sure you are selecting the correct radio module and if this error is repeatable on the suspected bad router yet works fine on a known good router, please request an RMA with reason: "Flashwriter radio check failed."

4 CHECK LEDS

Connect both Ethernet ports to a switch.

Access the CLI (Command Line Interface) – this can be achieved:

- Through the serial port @115200 bps
- Via a telnet or SSH connection
- Via the “execute a command” page of the web user interface.

Issue the “flashleds” command and check that all LEDs are illuminated. If there is an LED fault please request an RMA with code:

“**x LED failure**” where x is:

- Power LED
- SERVICE
- WWAN
- Signal III
- Signal II
- Signal I
- SYSTEM
- LAN 0
- LAN 1

The upper Ethernet LED will only light if a working network cable is attached.

5 CHECK W-WAN CONNECTIVITY

5.1 Test SIM detection switch

With the router powered off, insert a SIM card into BOTH SIM slots of the WR31 and open the CLI interface.

Access to the CLI (Command Line Interface) – this can be achieved:

- Through the serial port @115200 bps
- Via a telnet or SSH connection
- Via the “execute a command” page of the web user interface.

Issue the following command:

```
simconn ?
```

This command tells you which SIM slots are populated and also the SIM that is currently in use. The value before the comma is SIM 1 and the value after the comma is SIM 2. 1000 means that the SIM is present. 1001 means that the SIM is present and the active SIM. Here is a summary:

1 = SIM not present

1000 = SIM present

1001 = SIM present and connected

The output should be as follows:

```
simconn ?  
simconn: 1001,1000  
OK
```

Showing that SIM 1 is present and active and SIM 2 is present.

If the SIM cards are physically inserted but do not show as present please request an RMA with reason “**SIM DETECTION FAIL**”

How to test a WR31 router step by step.

5.2 Test SIM 1

Ensure that an antenna (or both if using an LTE unit) is connected and the router is located in an area with good signal strength.

Navigate to:

Configuration - Network > Interfaces > Advanced > PPP 1 > Mobile

Change **W-WAN SIM:** from “Any” to “SIM 1”




Click **Apply**.

Next navigate to


Configuration - Network > Interfaces > Mobile

And select SIM 1

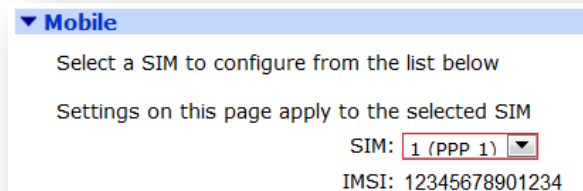

Under “**Mobile Settings**”

Enter the correct APN for the SIM card installed in slot 1

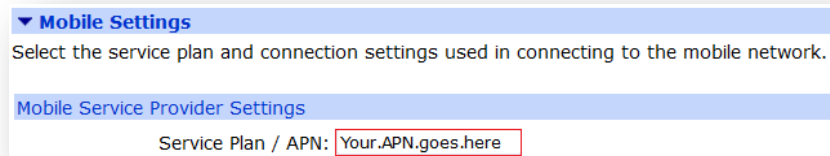

Click **Apply**.


How to test a WR31 router step by step.

Navigate to:

Management - Connections > PPP Connections > PPP 1

Wait for up to 5 minutes and check for a valid IP address

You may need to refresh the page for the new address to appear (click on >PPP 1)

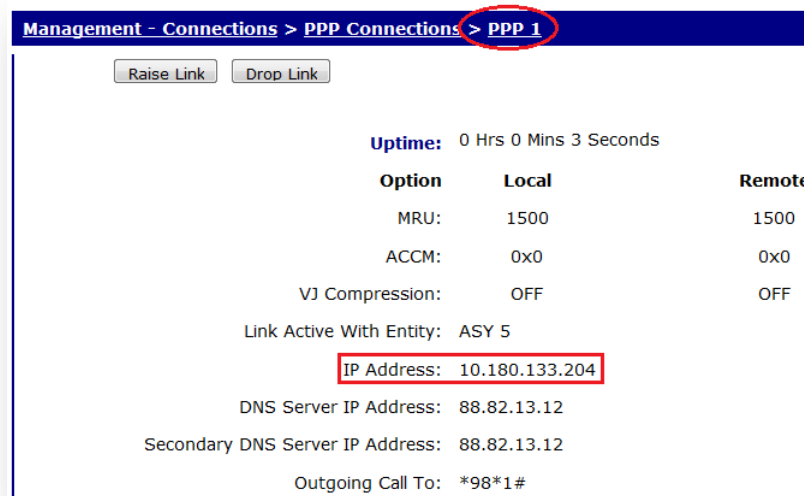

The screenshot shows the router's web interface for the PPP 1 connection. The breadcrumb navigation at the top is "Management - Connections > PPP Connections > PPP 1", with "PPP 1" highlighted in a red circle. Below the navigation are two buttons: "Raise Link" and "Drop Link". The main content area displays the following information:

- Uptime:** 0 Hrs 0 Mins 3 Seconds
- Option** | **Local** | **Remote**
- MRU: 1500 | 1500
- ACCM: 0x0 | 0x0
- VJ Compression: OFF | OFF
- Link Active With Entity: ASY 5
- IP Address:** 10.180.133.204 (highlighted in a red box)
- DNS Server IP Address: 88.82.13.12
- Secondary DNS Server IP Address: 88.82.13.12
- Outgoing Call To: *98*1#

If a valid IP address is **NOT** found, please download the **debug.txt** and email this to Digi Technical Support (tech.support@digi.com) or open a case at <http://www.digi.com/support/eservice/> for assistance.

Instructions on how to extract the **debug.txt** can be found in the following application note: http://ftp1.digi.com/support/documentation/QN_024_Extracting%20the%20debug.txt%20file%20from%20a%20Digi%20TransPort%20or%20Sarian%20router.pdf

How to test a WR31 router step by step.

5.3 Test SIM 2

Navigate to:

Configuration - Network > Interfaces > Advanced > PPP 1 > Mobile

Change “**W-WAN SIM:** from “**SIM 1**” to “**SIM 2**”




Use SIM Any SIM 1 SIM 2

Click **Apply**.

Next navigate to

Configuration - Network > Interfaces > Mobile

And select SIM 2

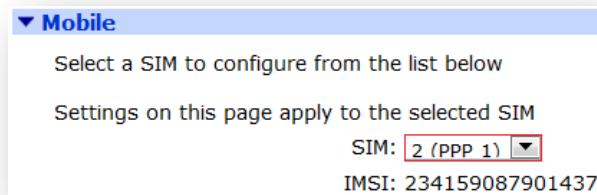

▼ **Mobile**

Select a SIM to configure from the list below


Settings on this page apply to the selected SIM

SIM:

IMSI: 234159087901437

And under “**Mobile Settings**”

Enter the correct APN for the SIM card installed in slot 2

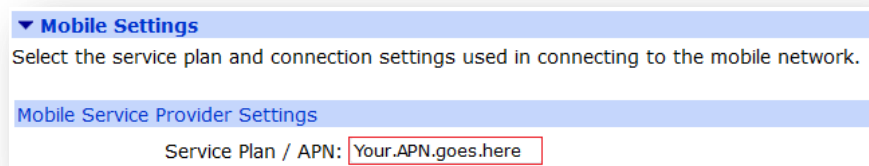

▼ **Mobile Settings**

Select the service plan and connection settings used in connecting to the mobile network.

Mobile Service Provider Settings

Service Plan / APN:

Click **Apply**

How to test a WR31 router step by step.

Now Navigate to:

Management - Connections > PPP Connections > PPP 1

Click “**Drop Link**” and refresh the page by clicking >PPP 1

You may need to wait up to 5 minutes

Management - Connections > PPP Connections > PPP 1

Raise Link Drop Link

Uptime: 0 Hrs 18 Mins 38 Seconds

Option	Local	Remote
MRU:	1500	1500
ACCM:	0x0	0x0
VJ Compression:	OFF	OFF

Link Active With Entity: ASY 5

IP Address: 10.161.51.25

DNS Server IP Address: 88.82.13.44

Secondary DNS Server IP Address: 88.82.13.44

Outgoing Call To: *98*1#

A valid IP address for SIM 2 should be seen – Notice it is different to the one assigned for SIM 1

If a valid IP address is **NOT** found, please download the **debug.txt** and email this to Digi Technical Support (tech.support@digi.com) or open a case at <http://www.digi.com/support/eservice/> for assistance.

Instructions on how to extract the **debug.txt** can be found in the following application note: http://ftp1.digi.com/support/documentation/QN_024_Extracting%20the%20debug.txt%20file%20from%20a%20Digi%20Transport%20or%20Sarian%20router.pdf

6 CHECK W-WAN SIGNAL STRENGTH

Whilst the internet link is still connected from step 5, access the CLI (Command Line Interface)

Access to the CLI (Command Line Interface) – this can be achieved:

- Through the serial port @115200 bps
- Via a telnet or SSH connection
- Via the “execute a command” page of the web user interface.

And issue the following command:

```
modemstat ?
```

```
192.168.1.1 - PuTTY
ss502918>modemstat ?
      Outcome: Got modem status OK:
      Time: 15 Mar 2016 17:37:02
      SIM status:  READY
      Signal strength: -71 dBm
      Radio technology: LTE
      LTE_RSRP: -100 dBm
      LTE_SINR: 7.5999999 dB
      LTE_RSRQ: -9.5 dB
      Manufacturer: Huawei Technologies Co., Ltd.
      Model: ME909u-521
      IMEI: 860461024890959
      IMSI: 262015410263928
      ICCID: 89490200000793405536
      Firmware: 11.234.77.00.00
      Phone number: +491704500167
      GPRS Attachment Status: Attached
      GPRS Registration: Registered, home network
      GSM Registration: Registered, home network lac:FFFFE ci:19FF701
      Network: 0,0,"Telekom.de Telekom.de",7
      Network Technology: LTE
      Service Domain: PS+CS services
      Last Error Report: No cause information available
      Preferred system: Auto
      Temperature: 22C
OK
ss502918>
```

Check that the signal strength is roughly what you normally get (+/- 10dB) with the same antenna in the test location.

If the signal strength is much worse than normal, make a note of the cell ID (lac:FFFFE ci:19FF701 in above example) and repeat the test on a known working WR31 that contains the same type of radio

How to test a WR31 router step by step.

module in the same location. Ensure the known working WR31 is connected using the same antenna and connects to the same cell ID (lac:00DF ci:01B0BD51 in above example). If it does and the signal strength is much better (+ 10dB) than the suspected bad router, request an RMA from Digi technical support with code: “Cellular signal strength low”

7 CHECK USB PORTS

Insert a valid USB device into the USB slots on the front of the WR31. A valid USB device is a device that you know works in a WR31 because you have tried it previously. Examples to try:


- USB Flash drive
- USB Serial adapter
- USB Mouse

Access to the CLI (Command Line Interface) – this can be achieved:

- Through the serial port @115200 bps
- Via a telnet or SSH connection
- Via the “execute a command” page of the web user interface.

And issue the following command:

busb show

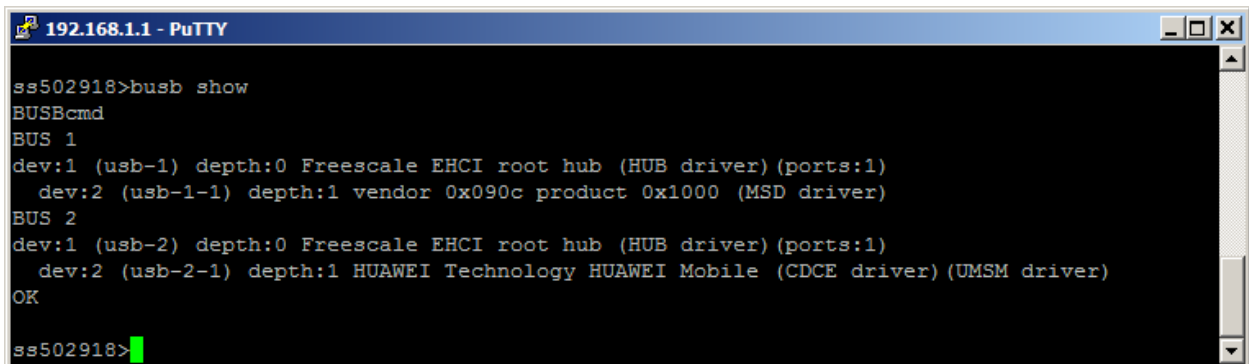

```
ss502918>busb show
BUSBcmd
BUS 1
dev:1 (usb-1) depth:0 Freescale EHCI root hub (HUB driver) (ports:1)
  dev:2 (usb-1-1) depth:1 vendor 0x090c product 0x1000 (MSD driver)
BUS 2
dev:1 (usb-2) depth:0 Freescale EHCI root hub (HUB driver) (ports:1)
  dev:2 (usb-2-1) depth:1 HUAWEI Technology HUAWEI Mobile (CDCE driver) (UMSM driver)
OK
ss502918>
```

2 devices should normally be present:

- Device in “BUS 1, dev2, depth 1” (There is a USB stick inserted)
- Device in “BUS 2, dev2, depth 1” (This is a **Huawei** radio module, do not be concerned if it is missing, the module may be mid power cycle. The text of this will vary based upon the type of module fitted.)

If the device in BUS 1, dev2, depth 1 is not present and this same devices shows up fine in a known working WR31, please request an RMA with code: “External USB port test failed”


8 CHECK ETH PORTS 1 AND 2

Note that it is not necessary to test Eth port 0. This was testing during the flashing process.

Access the CLI. Issue the command

```
id
```

and check that the router is in “port isolate mode”:

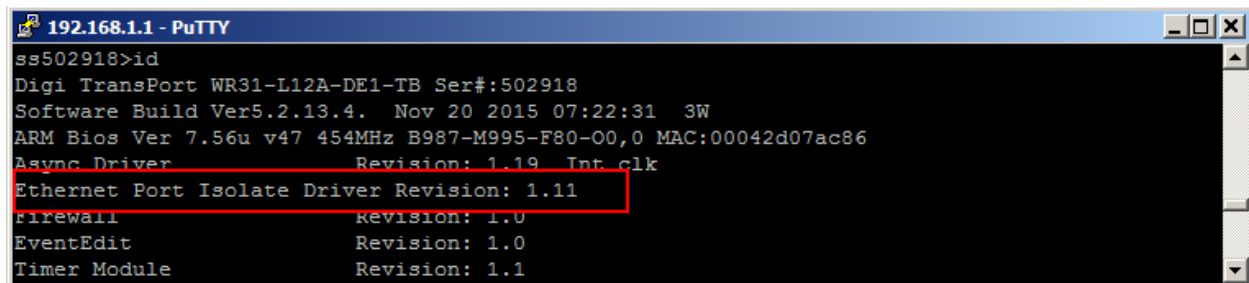

```
192.168.1.1 - PuTTY
ss502918>id
Digi TransPort WR31-L12A-DE1-TB Ser#:502918
Software Build Ver5.2.13.4. Nov 20 2015 07:22:31 3W
ARM Bios Ver 7.56u v47 454MHz B987-M995-F80-00,0 MAC:00042d07ac86
Async Driver Revision: 1.19 Int_clk
Ethernet Port Isolate Driver Revision: 1.11
Firewall Revision: 1.0
EventEdit Revision: 1.0
Timer Module Revision: 1.1
```

Otherwise, please enter the following CLI command and reboot afterwards:

```
ethvlan
```

Configure eth port 1 with a valid and free IP address on the same subnet as your test PC, e.g.

```
eth 1 ipaddr 192.168.1.1
```

From your PC, first clear the ARP table, from the Windows command prompt with the command:

```
arp -d *
```

Then check that you can ping this IP address from Windows.
If it works ok with ETH 0, repeat the test accordingly with ETH 1.

If it is not possible to ping this addresses and if you repeat this test on a known good WR31 and it works fine, please request an RMA with code “**ETH X test failed**” where X is the Eth port number that failed to respond.

Please don't forget to change back the Ethernet port mode back to the required mode!

It does not get changed via Factory Default!

The standard is Hub mode, which you select by the CLI command:


```
ethhub
```


How to test a WR31 router step by step.

9 CHECK SERIAL PORTS


With the PC serial port still connected to “Serial 0” of the WR31, launch Flashwriter again, ensure that the correct PC comm. port number is selected and click on “Check Serial” from the Advanced menu of FlashWriter.

When the following prompt is received:

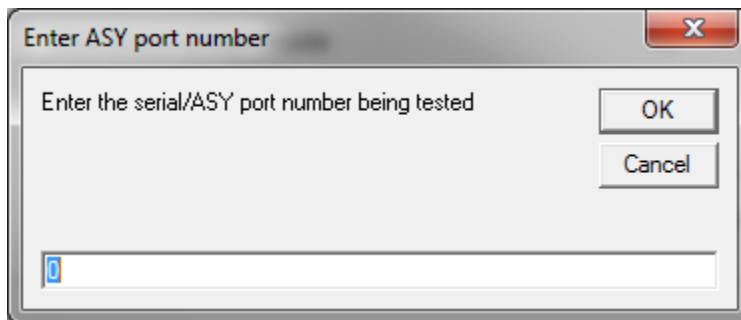

As you are testing “Serial 0” just click OK.

You should see this:

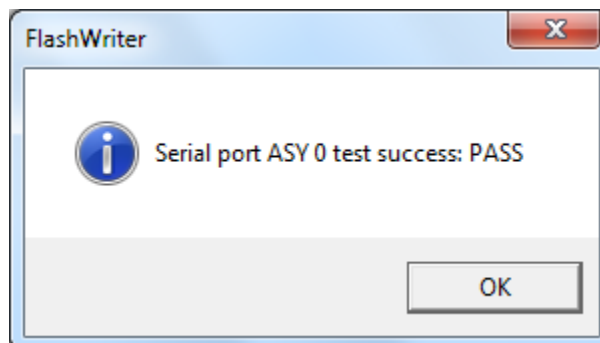

If any error messages occur, please refer to the following table to identify the best course of action:

How to test a WR31 router step by step.

Error Message	Recommendation
Problem sending AT\LS	Flashwriter is unable to establish contact with the router under test. Please check the cabling and try again. If the problem persists then repeat the process with a known working router. If the test is successful on a known working router and the problem is repeatable on the router under test, please request an RMA with reason: "Flashwriter serial I/O test fail."
Problem with DCD on (DCD was OFF when supposed to be ON)	First carefully check you are entering the correct serial/asy port number. If you get this wrong you will get a false fail! Next to verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter DCD test fail."
Problem with DCD on (DCD was ON when supposed to be OFF)	First carefully check you are entering the correct serial/asy port number. If you get this wrong you will get a false fail! Next to verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter DCD test fail."
Problem with DTR (DTR is off and should be ON)	To verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter DTR test fail."
Problem with DTR (DTR is ON and should be OFF) on	To verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter DTR test fail."
Problem with CTS (CTS is ON and should be OFF) on	To verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter CTS test fail."
Problem with CTS (CTS is OFF and should be ON) on	To verify cabling, please repeat this procedure on a known working router. If the test is successful on a known working router but repeatedly fails on the router under test then please request an RMA with reason: "Flashwriter CTS test fail."